McCULLOCH®

Operator's Manual	*Read carefully*	GB
Manuale d'istruzione	*Leggere attentamente*	I
Manuel d'instructions	*Lire attentivement*	F
Bedienungsanleitung	*Sorgfältig lesen!*	D
Manual de instrucciones	*Leer atentamente*	E
Gebruikershandleiding	*Eerst goed doorlezen*	NL
Ägarhandbok	*Läs noga*	S
Brugehåndbog	*Læs omhyggeligt*	DK
Omistajankäsikirja	*Lue huolellisesti*	FIN
Eierens Håndbok	*Les nøye*	N
Manual de Instruções	*Ler atentamente*	P
ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ	***ΔΙΑΒΑΣΤΕ ΠΡΟΣΕΚΤΙΚΑ***	GR

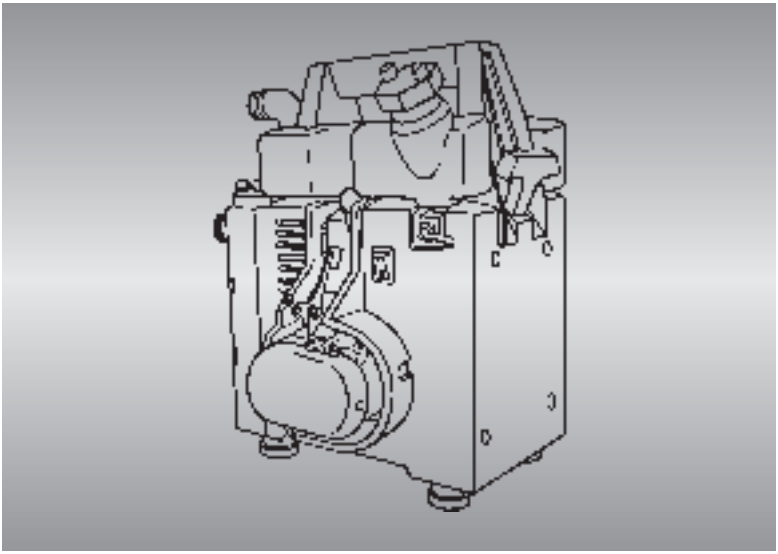

CE

AQUAMAC 40-45 / 40cc

AGRIMAC / 40cc

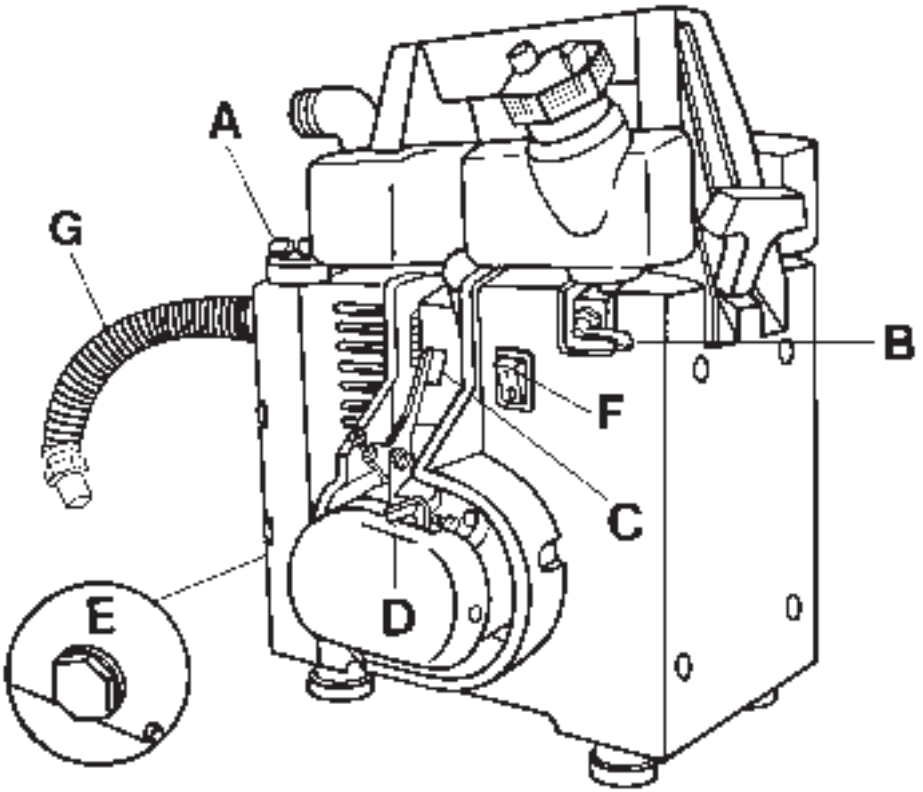

	Partner oil	McCulloch oil	2 T oil
	50 : 1 2%	40 : 1 2,5%	25 : 1 4%
1 ltr.	20 cm^3	25 cm^3	40 cm^3
4	80	100	160
5	100	125	200
10	200	250	400
20	400	500	800

UNLEADED PETROL: if using unleaded petrol, you must use a **totally synthetic** 2-stroke engine oil or branded 2-stroke engine oil (see table).

CAUTION: never start the engine with dry pump as some mechanical parts could be damaged.

PUMP PRIMING: before starting and if the pump is empty, fill it with water through the appropriate cap **(A)**. Replace the cap and tighten it.

STARTING:

1) Open fuel tap lever **(B)** by moving to vertical position (open).
2) Set switch to "on" position **"I"**, **(F)**.
3) Set the throttle lever **(C)** to half open position.
4) Close the choke lever **(D)**, downward position (for cold engine only).
5) Pull the starter rope until the engine fires.
6) As soon as the engine fires once, set the choke lever **(D)** to open position (upward).

WORKING: the water flow can be adjusted by setting the throttle lever **(C)**.

STOP: switch to stop position **"O"**.

DAILY MAINTENANCE:

1) All residual water must be evacuated through the drainage cap **(E)** situated on the lower part of the pump. This operation must be done regularly as frozen water would irreparably damage the pump.
2) Rinse the pump with clean fresh water after use with dirty water (or salted water and other liquids, Marinamac / Agrimac).

EVERY 20 HOURS: clean and ensure spark plug gap is 0,5 ≅ 0,6 mm.

EVERY 40 HOURS:

1) Replace spark plug (champion RDJ8J).
2) Clean air filter, more frequently when working in dusty conditions.

STORAGE: empty fuel tank and run engine dry.

RECOMMENDATIONS:

1) Use an efficient suction filter.
2) Ensure suction tube **(G)** is securely tightened.
3) P45 must never be used for salt water or other corrosive liquids.

ENSURE ALL MAINTENANCE OR REPAIR WORK IS CARRIED OUT BY AN AUTHORISED SERVICE CENTER.

SAFETY:

1) Never re-fuel while the engine is running. Do not smoke during this operation.
2) Only use the pump in a well ventilated area.
3) Never use for pumping inflammable liquids or acids.
4) Be careful of the hot surfaces on the unit.

EUROPEAN CONFORMITY INFORMATION

THIS PRODUCT MEETS THE FOLLOWING EUROPEAN DIRECTIVE:

98/37/CEE MACHINERY (SAFETY) DIRECTIVE

DIRECTIVE 2000/14/CEE (ANNEX V)

ENGINE OUTPUT	(Kw)	1,7
MAX CAPACITY	(lt/min)	150
MAX HEAD	(m)	58
MAX SUCTION HEAD	(m)	6
ENGINE SPEED AT MAX POWER	(min^{-1})	8500
GUARANTEED SOUND POWER LEVEL LwAav (dBA) (ISO 3744)		110
MEASURED SOUND POWER LEVEL LwAav (dBA) (ISO 3744)		108,5

ELECTROLUX OUTDOOR
PRODUCTS

23868 Valmadrera (Lecco), Via Como 72, Italia.

P/N. 246379 (01.02)